


USER MANUAL

Version 1.1 May 2018

Quest Tablet

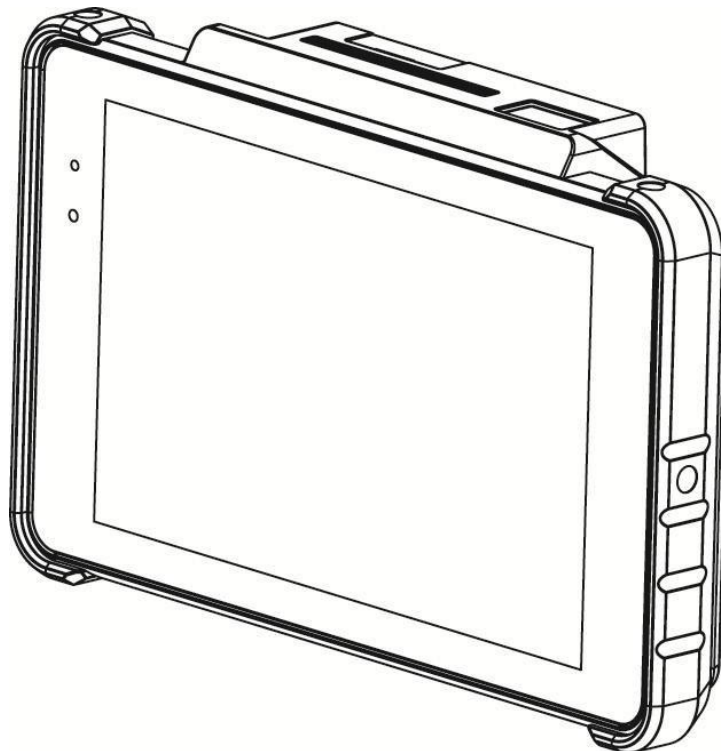

Copyright

Copyright 2018

All Rights Reserved

Manual Version 1.0

The information contained in this document is subject to change without notice.

We make no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. We shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without the prior written consent of the manufacturer.

TRADEMARK

The material in this manual is subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG.

Microsoft® , Windows® and ActiveSync® are either registered trademarks or trademarks of Microsoft Corporation.

All other product or service names are the property of their respective owners.

Safety

Regulatory Information

Caution: Only use approved and UL Listed accessories, battery packs and battery chargers. Do NOT attempt to charge damp/wet mobile computers or batteries. All components must be dry before connecting to an external power source.

Power Supply

Use only the approved power supply 50-14000-148 output rated 5 Vdc and minimum 2 A. The power supply is certified to EN60950-1 with SELV outputs. Use of alternative power supply will invalidate any approval given to this device and may be dangerous.

Warning for Use of Wireless Devices

Please observe all warning notices with regard to the usage of wireless devices.

Potentially Hazardous Atmospheres

You are reminded of the need to observe restrictions on the use of radio devices in fuel depots, chemical plants etc. and areas where the air contains chemicals or particles

(such as grain, dust, or metal powders) and any other area where you would normally be advised to turn off your vehicle engine.

Safety in Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Pacemakers

Pacemaker manufacturers recommended that a minimum of 15cm (6 inches) be maintained between a handheld wireless device and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with independent research and recommendations by Wireless Technology Research.

Persons with Pacemakers

Persons with Pacemakers should ALWAYS keep the device more than 15cm (6 inches) from their pacemaker when turned ON and hence they should not carry the device in a breast pocket . Should use the ear furthest from the pacemaker to minimize the potential for interference. If you have any reason to suspect that interference is taking place, turn OFF your device.

Hearing Aids

The wireless device may interfere with some hearing aids. In the event of interference you may want to consult your hearing aid supplier to discuss solutions.

Other Medical Devices

Please consult your physician or the manufacturer of the medical device, to determine if the operation of your wireless product may interfere with the medical device.

FCC/EU RF Exposure Guidelines

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC SAR exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



CE Marking and European Economic Area

The use of 2.4GHz WLAN's, for use through the EEA, have the following restrictions:

- Maximum radiated transmit power of 100 mW EIRP in the frequency range 2.400 -2.4835 GHz
- France, outside usage is restricted to 2.4 - 2.454 GHz.
- Italy requires a user license for outside usage.

Bluetooth® Wireless Technology for use through the EEA has the following restrictions:

- Maximum radiated transmit power of 100mW EIRP in the frequency range 2.400 -2.4835 GHz
- France, outside usage is restricted to 10mW EIRP
- Italy requires a user license for outside usage.

CE RF exposure

For body-worn operation, this device has been tested and meets the ICNIRP guidelines and the European Standard EN62209-2, for use with dedicated accessories.

SAR is measured with this device at a separation of 0cm to the body, while transmitting at the highest certified output power level in all frequency bands of this device.

Battery Information

Our rechargeable battery packs are designed and constructed to the highest standards within the industry.

However, there are limitations to how long a battery can operate or be stored before needing replacement.

Many factors affect the actual life cycle of a battery pack, such as heat, cold, harsh environmental conditions and severe drops.

When batteries are stored over six (6) months, some irreversible deterioration in overall battery quality may occur. Store batteries discharged in a dry, cool place, removed from the equipment to prevent loss of capacity, rusting of metallic parts and electrolyte leakage. When storing batteries for one year or longer, they should be charged and discharged at least once a year. If an electrolyte leakage is observed, avoid any contact with affected area and properly dispose

of the battery. Batteries must be charged within the 32° to 95° F (0° to +35° C) ambient temperature range.

Replace the battery when a significant loss of run time is detected.



Battery Caution

Risk of explosion if battery is replaced by an incorrectly type.

Dispose of used battery according to the local disposal instructions.



Waste Electrical and Electronic Equipment (WEEE)

English: For EU Customers: All products at the end of their life must be returned to the reseller for recycling.

Notational Conventions

The following conventions are used in this document:

- Italics are used to highlight specific items in the general text, and to identify chapters and sections in this and related documents.
- bullets (•) indicate:
 - action items
 - lists of alternatives
 - lists of required steps that are not necessarily sequential
 - Sequential lists (e.g., those that describe step-by-step procedures) appear as numbered lists.

NOTE

This symbol indicates something of special interest or importance to the reader. Failure to read the note will not result in physical harm to the reader, equipment or data.

CAUTION

This symbol indicates that if this information is ignored, the possibility of data or material damage may occur.

WARNING!

This symbol indicates that if this information is ignored the possibility that serious personal injury may occur.

Revision History

Version	Date	Description
1.0	January, 2018	Initial release
1.1	May, 2018	Initial release

Table of Contents


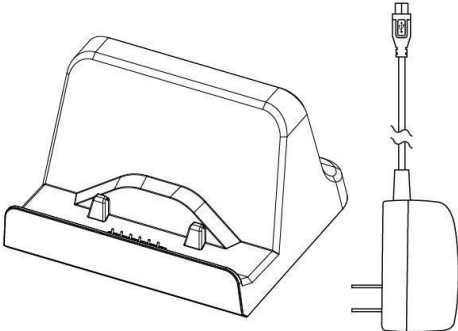
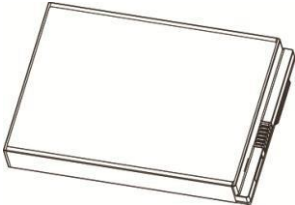
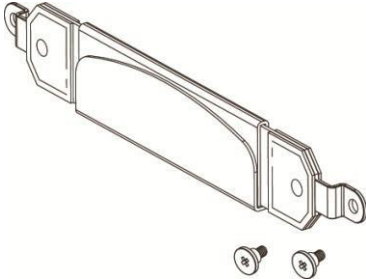
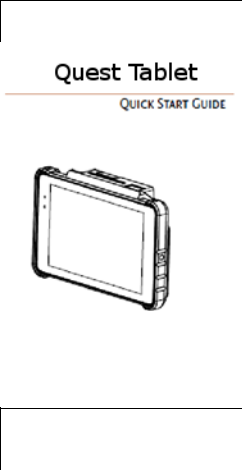
- 1 Item Checklist 8
 - 1-1 Standard Items 8

- 2 System View 9
 - 2-1 Front View 9
 - 2-2 Rear View 10
 - 2-3 Specification 11

- 3 Getting Started 13
 - 3-1 Power On/Off the System 13
 - 3-2 Installing the Hand Strap 13
 - 3-3 Replacing the Battery 14
 - 3-4 Using the Charging Cradle 15


1 Item Checklist

1-1 Standard Items

	
a. Tablet	b. Charging cradle with OTG cable and power adapter
	
c. Battery	d. Hand strap (with two screws)
	
e. Quick start guide	


2 System View

2-1 Front View

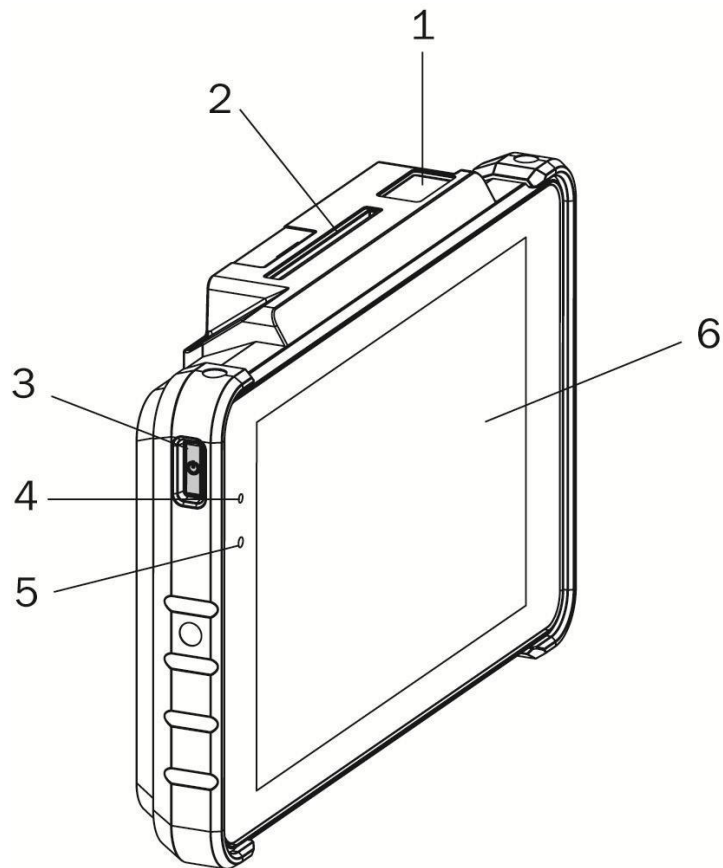

No.	Description
1	2D Scanner (optional)
2	Smart card reader (optional)
3	Power button
4	Power LED light indicator
5	Ambient light sensor
6	LCD with the Touch panel

2-2 Rear View

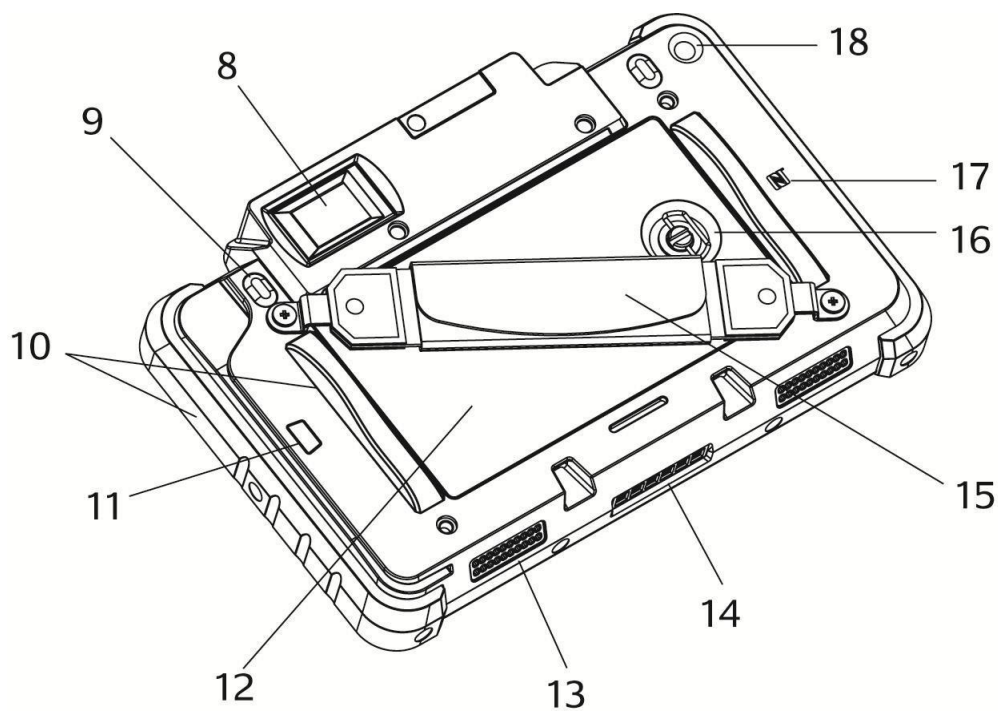

No.	Description
8	Fingerprint (optional)
9	Programmable button(default is the scan button)
10	Integrated protective bumper
11	MSR
12	Battery cover
13	Speaker
14	Power charging plate
15	Hand strap
16	Pen screw for the battery cover
17	NFC logo /NFC location (optional)
18	Camera (optional)

2-3 Specification

System	Quest7	Quest10
Motherboard	Cherry Trail series	
CPU	Intel Atom Processor X7-Z8700 series	
System / Flash Memory	4GB LPDDR3 / 64GB eMMC	
LCD Touch Panel		
LCD Size	7"	10"
Interface	MIPI	
Resolution	1280 x 800	1920 x 1200
Touch Screen	P-CAP 5 points Multi-touch	
Wireless Networking		
Wireless LAN	802.11 a/b/g/n,ac 2.4G/5GHz	
Bluetooth	4.0+LE, Class 2	
NFC	Optional	
RFID	Not available	Optional
Expansion I/O Ports		
DC input	Pogo pins	
Audio		
Speaker	1 x 1W Speaker	2 x 1W Speaker
Control / Indicator		
Power Button	1	
Sensor	G-sensor, Ambient Light Sensor	
Tactile feedback	Built-in motor (can be disabled in the BIOS)	
LED Indicator	1 (Battery status indicator)	
Peripherals		
Camera	Rear 8MP (optional)	
MSR	3 Tracks MSR	
Hand strap	1	
IC card reader	Smart Card Reader (Optional)	
Scanner	2D Barcode Scanner (Optional)	
Fingerprint	Crossmatch Steelcoat reader (optional)	
Cradle		
USB Port	Micro-USB 2.0 x 1	
Power Adapter	5V/3A , 15W	

Battery & Power		
Battery	8000 mAh, 3.7V, 29.6 Wh ^{*2}	
Certificate		
EMC & Safety	FCC Class B / CE Mark	
Environment		
IP Rating	IP54 (front)	
Drop test	1.2 m drop, 1 drop per side at 25°C ^{*3*4}	
Operating Temperature (Not in charging mode)	0°C ~ 40°C (32°F ~104 °F)	
Operating Temperature (running charging mode)	0°C ~ 35°C (32 °F ~ +95 °F)	
Storage Temperature	-10°C ~ 45°C (14°F ~ 114°F)	
Operating Humidity	20% - 80% RH non-condensing	
Storage Humidity	20% - 80% RH non-condensing	
Size		
Dimension	203.9 x 127.9 x 35.3mm (8.0" x 5.0" x 1.3")	268 x 176 x 35.5mm (10.6" x 6.9" x 1.4")
Weight	665g (1.47lbs)	930g (2.08lbs)
Weight (with all peripherals)	Max 690g (1.52lbs)	Max 990g (2.18lbs)
OS Support	Windows 10 Professional, Windows 10 IoT Enterprise, Android 7.0.0	

*1. Tablet LED indicator: Green light-Full charged / Orange light- Charging / Red flash light- Low battery / Red light- Critical low battery.


*2. The actual operation hours will be affected by real application environment.

*3. The drop durability height is a measured value resulting from actual testing. It does not necessarily guarantee the product from damage.

*4. The drop durability height does not include the protruding parts.


3 Getting Started

3-1 Power On/Off the System

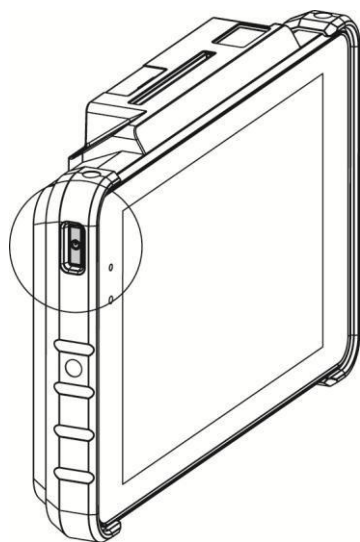


1. Push the power button to turn on the system and hold 4~6 seconds to turn off the system.
Note: For the best touch performance, remove the protective plastic overlay from the LCD screen by peeling it away from one of the corners. Be sure to use a soft pointing device or finger tip to avoid scratching the screen during normal use.

3-2 Installing the Hand Strap

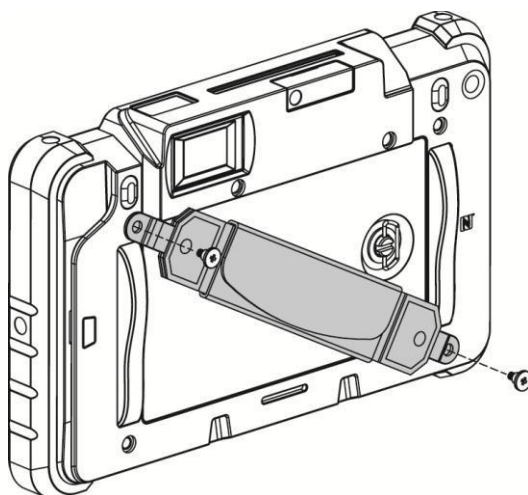


1. Attach the hand strap to the back of the system and fasten the screws (x2) to secure it.


3-3 Replacing the Battery

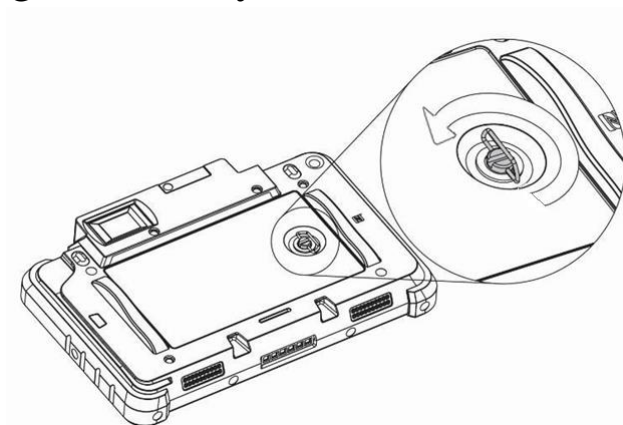

1. Loosen the pen screw counter-clockwise.

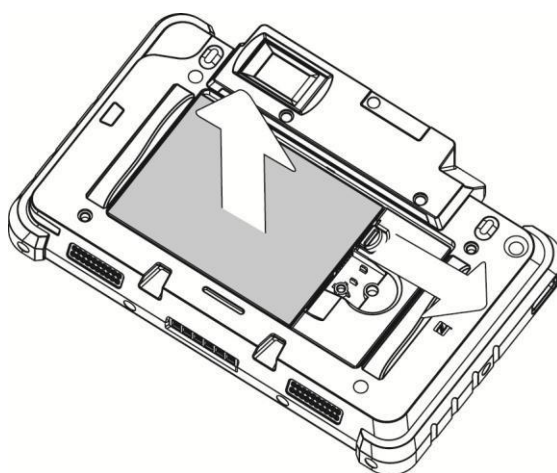


2. To remove the battery pull the plastic tab aside and gently pull the battery out.

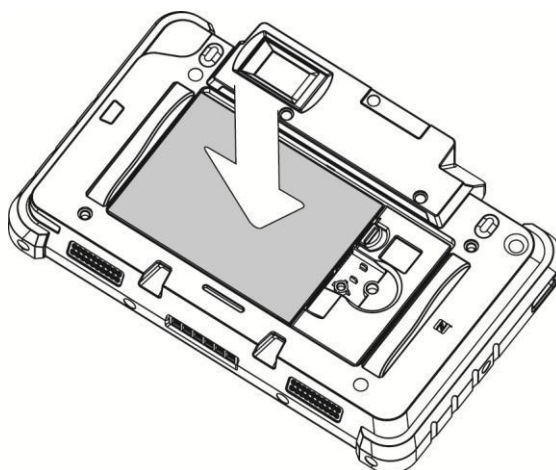

3. To install the battery put the battery in the slot and push until the battery clicks into place, put the batter cover back in and secure the pen screw clock-wise.

3-4 Using the Charging Cradle

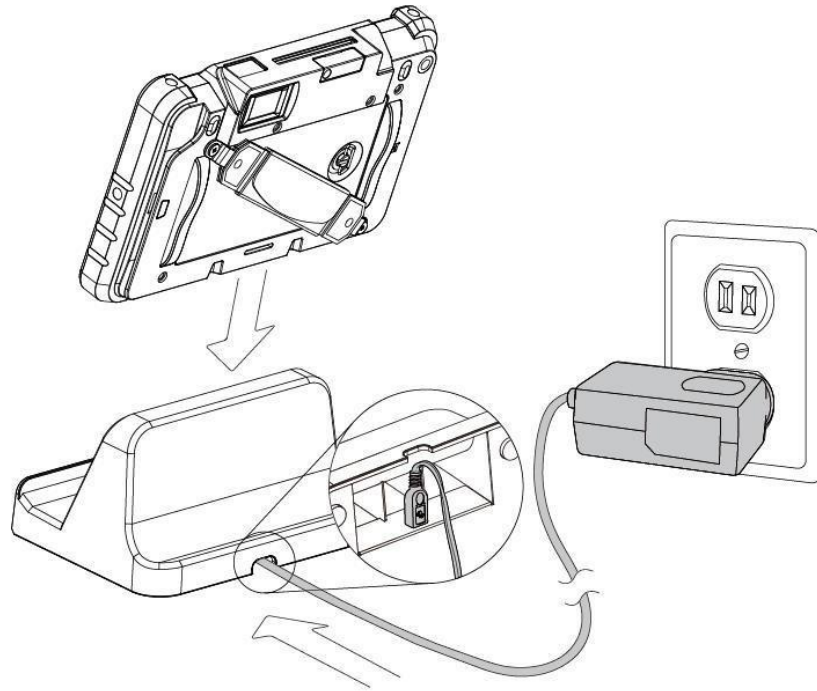

1. Connect the USB adapter to the connector on the bottom of the cradle charger and the power outlet.